



MOTOROLA

Level 1 and 2 Service Manual

6809493A69-O

V360

Digital Wireless Telephone



V360 GSM 850/900/1800/1900 MHz GPRS

Introduction	5
Product Identification	5
Product Names	5
Product Changes	5
Regulatory Agency Compliance	5
Computer Program Copyrights	6
About This Service Manual	6
Warranty Service Policy	7
Parts Replacement	8
Specifications	9
Product Overview	11
Features	11
General Operation	14
Controls, Indicators, and Input / Output (I/O) Connections	14
User Interface Menu Structure	16
Alert Settings	17
Battery Function	17
Operation	17
Tools and Test Equipment	19
Disassembly	20
Removing and Replacing the Battery Cover and Battery	20
Removing and Replacing the Subscriber Identity Module (SIM)	22
Removing and Replacing the Antenna Cap	23
Removing and Replacing the Rear Housing	24
Removing and Replacing the Microphone	26
Removing and Replacing the Transceiver Board Assembly	27
Removing and Replacing the Flip Assembly	28
Removing and Replacing the Flip Assembly Bezel	30
Removing and Replacing the Display Assembly	31
Removing and Replacing the Camera Assembly	34
Removing and Replacing the Motor Vibrator Assembly	35
Removing and Replacing the Display Module Assembly	36
Subscriber Identity Module (SIM) and Identification	37
SIM Card	37
Personality Transfer	37
Identification	37
Troubleshooting	39
Manual Test Mode	39
Manual Test Mode Commands	39
Troubleshooting Chart	41
Programming: Software Upgrade and Flexing	43
Related Publications	43
Exploded View Diagram	44
Exploded View Parts List	45

Introduction

Motorola® Inc. maintains a worldwide organization that is dedicated to provide responsive, full-service customer support. Motorola products are serviced by an international network of company-operated product-care centers as well as authorized independent service firms.

Available on a contract basis, Motorola Inc. offers comprehensive maintenance and installation programs that allow customers to meet requirements for reliable, continuous communications.

To learn more about the wide range of Motorola service programs, contact your local Motorola products representative or the nearest Customer Service Manager.

Product Identification

Motorola products are identified by the model number on a label usually located under the battery. Use the entire model number when inquiring about the product. Numbers are also assigned to chassis and kits. Use these numbers when requesting information or ordering replacement parts.

Product Names

Product names are listed on the front cover. Product names are subject to change without notice. Some product names, as well as some frequency bands, are available only in certain markets.

Product Changes

When electrical, mechanical or production changes are incorporated into Motorola products, a revision letter is assigned to the chassis or kit affected, for example; -A, -B, or -C, and so on.

The chassis or kit number, complete with revision number, is imprinted during production. The revision letter is an integral part of the chassis or kit number and is also listed on schematic diagrams and printed-circuit board layouts.

Regulatory Agency Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- This device may not cause any harmful interference
- This device must accept interference received, including interference that may cause undesired operation

This class B device also complies with all requirements of the Canadian Interference-Causing Equipment Regulations (ICES-003).

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Computer Program Copyrights

The Motorola products described in this manual may include Motorola computer programs stored in semiconductor memories or other media that are copyrighted with all rights reserved worldwide to Motorola. Laws in the United States and other countries preserve for Motorola, Inc. certain exclusive rights to the copyrighted computer programs, including the exclusive right to copy, reproduce, modify, decompile, disassemble, and reverse-engineer the Motorola computer programs in any manner or form without Motorola's prior written consent. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license or rights under the copyrights, patents, or patent applications of Motorola, except for a nonexclusive license to use the Motorola product and the Motorola computer programs with the Motorola product.

About This Service Manual

Use of this manual assures proper installation, operation, and maintenance of Motorola products and equipment. It contains all service information required for the equipment described and is current as of the printing date. Refer questions about this manual to the nearest Customer Service Manager.

Audience

This manual aids service personnel in testing and repairing V360 telephones. Service personnel should be familiar with electronic assembly, testing, and troubleshooting methods, and with the operation and use of associated test equipment.

Scope

This manual provides basic information relating to V360 telephones, and also provides procedures and processes for repairing the phones at Level 1 and 2 service centers including:

- Unit swap out
- Repairing of mechanical faults
- Basic modular troubleshooting
- Testing and verification of unit functionality
- Initiate warranty claims and send faulty modules to Level 3 or 4 repair centers

Conventions

The following special characters and typefaces, are used in this manual to emphasize certain types of information.



Note: Emphasizes additional information pertinent to the subject matter.



Caution: Emphasizes information about actions which may result in equipment damage.



Warning: Emphasizes information about actions which may result in personal injury.



Keys to be pressed are represented graphically. For example, instead of “Press the Menu Key”, you will see “Press 

Information from a screen is shown in text as similar as possible to what displays on the screen. For example, **PHONEBOOK**.

Information that you need to type is printed in **boldface type**.

Warranty Service Policy

The product is sold with the standard 12-month warranty terms and conditions. Accidental damage, misuse, and extended warranties offered by retailers are not supported under warranty. Non-warranty repairs are available at agreed fixed repair prices.

Out-of-Box Failure Policy

The standard out-of-box failure criteria applies. Return customer units that fail very early on after the date of sale to Manufacturing for root cause analysis, to guard against epidemic criteria. Manufacturing to bear the costs of early life failure.

Product Support

Customer's original units will be repaired but not refurbished as standard. Appointed Motorola Service Hubs will perform warranty and non-warranty field service for level 2 (assemblies) and level 3 (limited PCB component). Motorola High Tech Centers will perform level-4 (full component) repairs.

Customer Support

Customer support is available through dedicated Call Centers and in-country help desks. Product Service training is available through the local Motorola Support Center.

Parts Replacement

When ordering replacement parts or equipment, include the Motorola part number and description used in the service manual.

When the Motorola part number of a component is not known, use the product model number or other related major assembly along with a description of the related major assembly and of the component in question.

In the U.S.A., to contact Motorola, Inc. on your TTY, call: 800-793-7834.

Accessories and Aftermarket Division (AAD)

Order replacement parts, test equipment, and manuals from AAD.

U.S.A.

Phone: 800-422-4210

FAX: 800-622-6210

Website: <http://businessonline.motorola.com>

Outside U.S.A.

Phone: 847-538-8023

FAX: 847-576-3023

EMEA

Phone: +49 461 803 1638

Website: <http://emeaonline.motorola.com>

Asia

Phone: +65 648 62995

Website: <http://asiaonline.motorola.com>

Specifications

General Function	Specification
Frequency Range GSM 850	824-848 MHz Tx 869-893 MHz Rx
Frequency Range GSM 900	880-915 MHz Tx (with EGSM) 925-960 MHz Rx
Frequency Range DCS 1800	1710-1785 MHz Tx 1805-1880 MHz Rx
Frequency Range PCS 1900	1850-1910 MHz Tx 1930-1990 MHz Rx
Channel Spacing	200 kHz
Channels	174 EGSM, 374 DCS, 374 PCS, 124 GSM 850 carriers with 8 channels per carrier
Modulation	GMSK at BT = 0.3
Transmitter Phase Accuracy	5 Degrees RMS, 20 Degrees peak
Duplex Spacing	45 MHz
Frequency Stability	± 0.10 ppm of the downlink frequency (Rx)
Operating Voltage	+3.2V dc to +5.5V dc (battery) +4.8V dc to +6.5V dc (external connector)
Transmit Current Drain	101-260 mA average talk current drain
Stand-by Current drain	5 mA (DRX2), 2 mA (DXR9) typical
Temperature Range	-10° C to +55° C (+15° F to +130° F)
Dimensions, with 810 mAh Li Ion battery	47 mm x 90 mm x 24.3 mm (1.85 inches x 3.54 inches x 0.95 inches)
Size (Volume)	85 cc (5.18 in ³), with battery
Weight	110 grams (3.88 oz), with battery
Battery Life, with standard 810 mAh Li-Ion Battery	Talk Time 150-450 minutes Standby time 140 -240 hours All talk and standby times are approximate and depend on network configuration, signal strength, and features selected. Standby times are quoted as a range from DRX=2 to DRX=9. Talk times are quoted as a range from DTX off to DTX on.
Battery Charge Time	4 hours to 90% of 810 mAh capacity
Alert volume	Max 95 dB @5cm, 0.5 Watts input

Transmitter Function	Specification
RF Power Output	32 dBm nominal GSM 850/900 29 dBm nominal GSM 1800/1900
Output Impedance	50 ohms nominal
Spurious Emissions	-36 dBm from 0.1 to 1 GHz, -30 dBm from 1 to 4 GHz

Receiver Function	Specification
Receive Sensitivity	Better than -103 dBm
RX Bit Error Rate (100k bits) Type II	< 2%

Speech Coding Function	Specification
Speech Coding Type	Regular pulse excitation/linear predictive coding with long term prediction (RPE LPC with LTP)
Bit Rate	13.0 kbps

Speech Coding Function	Specification
Frame Duration	20 ms
Block Length	260 bits
Classes	Class 1 bits = 182 bits; Class 2 bits = 78 bits
Bit Rate with FEC Encoding	22.8 kbps

Product Overview

Motorola V360 telephones represent some of the most compact and lightweight global system for mobile communications (GSM) general packet radio service (GPRS) wireless application protocol (WAP)-enabled mobile phones. The V360 phones incorporate an easy to use graphic user interface (GUI) for easier operation, allows short message service (SMS) text messaging, and includes personal information manager (PIM) functionality.

The V360 is a quad-band phone that allows roaming within the GSM 850 MHz, GSM 900 MHz, 1800 MHz digital cellular system (DCS), and 1900 MHz PCS bands.

V360 telephones support GPRS, EDGE, SMS, EMS, and MMS in addition to traditional circuit switched transport technologies. GPRS or EDGE, where available, provides substantial increases in mobile data communications performance and the efficient use of radio spectrum. Data transmission rates for GSM networks can potentially increase from the current rate of 9.6 kbps up to a theoretical maximum of 171.2 kbps (GPRS) or 384 kbps (EDGE). An increased data rate is by no means the only benefit provided by GPRS/EDGE. A key advantage is the provision of a permanent virtual connection to the network. This “always on” connection is possible because GPRS/EDGE uses packet data transfer so that, for example, email can be downloaded in “background mode.” There is no need for the user to reconnect before requesting a service, eliminating connection set-up delays and adding convenience and immediacy to data services access. The “virtual” nature of this connection means that network resources are not consumed during periods when a user is not actually sending or receiving data. Multimedia messaging allows the end user to send photos along with personalized voice messages.

V360 telephones have a clam form factor. They feature an externally viewable 96 x 80 pixel grayscale display for caller identification and date/time, an internal 176 x 220 pixel 64K TFT display, and the speaker located in the flip. The bottom part of the clam (front housing) contains the keypad, transceiver printed circuit board (PCB), microphone, flex connection, external accessory connector, smart button, volume buttons, and voice button. The standard 810 mAh Lithium Ion (Li Ion) battery fits behind a removable back cover.

The phone accepts both 3V and 1.8V mini subscriber identity module (SIM) cards which fit into the SIM holder next to the battery. The antenna is mounted internally. Inexpensive direct connection to a computer or handheld device via USB or Bluetooth® for data and fax calls, and for synchronizing phonebook entries with Mobile Phone Tools software, can be accomplished by using the optional data cable and soft modem.

Features

V360 telephones use advanced, self-contained, sealed, custom integrated circuits to perform the complex functions required for GSM GPRS communication. Aside from the space and weight advantage, microcircuits enhance basic reliability, simplify maintenance, and provide a wide variety of operational functions.

Features available in this family of telephones include:

- GSM 850/900/1800/1900 MHz GPRS (2U/4D)
- Built in VGA Camera (640x480 pixels)
- 64K Thin Film Transistor (TFT) Active Color Display
- External CLI Display
- Polyphonic Speaker

- Speaker Phone
- Bluetooth™
- Trans-Flash Removable User Memory

Speaker Dependant Voice Activation and Voice Note Recording

Voice tags can be used for voice dialing up to 20 phone numbers in the phone book and for creating up to 5 voice shortcuts for menu items. The phone must be “trained” by the voice tag being read into the phone’s memory twice before it is recognized.

You can add voice tags to the phone’s memory using the usual name addition methods (i.e., via the phone book menu structure or with the shortcut editor).



You cannot place or receive calls while adding voice tags to the phone’s memory.



Because the GSM standard does not provide the option to store voice tags onto the SIM card, voice tags are added to the phone’s memory.

V360 telephones also include a voice recorder that allows up to 2 minutes of personal messages to be recorded. This feature has a complete set of record, playback, and management tools that make it easy to store and maintain a list of personal memos.

Wireless Access Protocol (WAP) 1.1 Compliancy

In the WAP environment, access to the Internet is initiated in wireless markup language (WML), which is derived from hypertext markup language (HTML). The request is passed to a WAP gateway which retrieves the information from the server in standard HTML (subsequently filtered to WML) or directly in WML if available. The information is then passed to the mobile subscriber via the mobile network.

The V360 microbrowser can be configured for baud, idle timeout, line type, phone number, and connection type.



Bitmap image data will download as text. If the image is larger than the screen, only part of the image will display.



When the user receives a call while in browser mode, the browser will pause and allow the user to resume after completing the call.

SIM Application Toolkit™ - Class 2

SIM Application Toolkit is a value-added service delivery mechanism that allows GSM operators to customize the services they offer their customers, from the occasional user who requests sports news and traffic alerts, to a high call time business user who receives stock alerts and checks flight times. Operators can now create their own value-added services menu quickly and easily in the phone. The customized menu will appear as the first menu and may be updated over-the-air with new services when customers request them.

Simplified Text Entry

There are three different ways to enter text using the phone keypad:

- iTAP™ predictive text entry. Press a key to generate a character and a dynamic dictionary uses this to build and display a set of word or name options. The iTAP™ feature may not be available on the phone in all languages.
- Tap. Press a key to generate a character.
- Numeric. The keypad produces numeric characters only. For some text areas this is the only method available; for example, phone numbers.

Caller Line Identification

Upon receipt of a call, the calling party's phone number is compared to the phone book. If the number matches a phone book entry, that name will be displayed. If there is no phone book entry, the incoming phone number will be displayed. In the event that no caller identification information is available, the Incoming Call message is displayed.



User must subscribe to a caller line identification service through their service provider.

Other Features

Detailed descriptions of these and other V360 features can be found in the appropriate user's guide listed in the "Related Publications" section toward the end of this manual.

General Operation

Controls, Indicators, and Input / Output (I/O) Connections

The V360 series telephone's controls are located on the sides of the flip and on the keypad. Indicators, in the form of icons, are displayed on the LCD (see Figure 2). V360 phones have an audible alert transducer on the top and I/O connectors, consisting of a charger/accessory port, located on the side of the phone. See Figure 1.

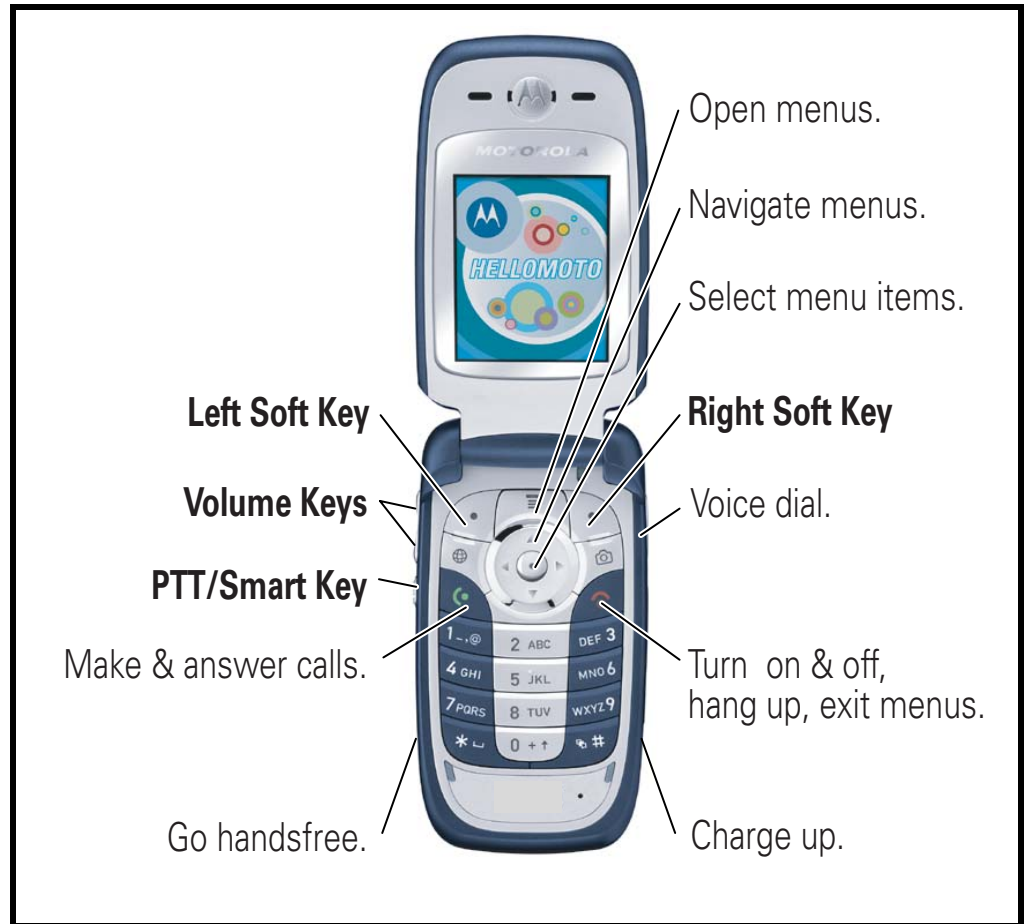


Figure 1. Controls, indicators, and I/O

050307o


“Soft keys” refer to non-labeled keys that correspond to text options displayed on the screen. The left and right soft keys perform the function shown in the corners of the display. The right key will usually select an option whereas the left key will usually exit a function or return to a previous screen.

The menu key opens the initial menu structure, or allows access to a submenu whenever  appears on the display.

Color Display

The V360 wireless phones feature a 64k color Thin Film Transistor (TFT) 176x220 pixel display.

Display animation makes the phone's menus move smoothly as the user scrolls up and down. Turn animation off to conserve the battery.

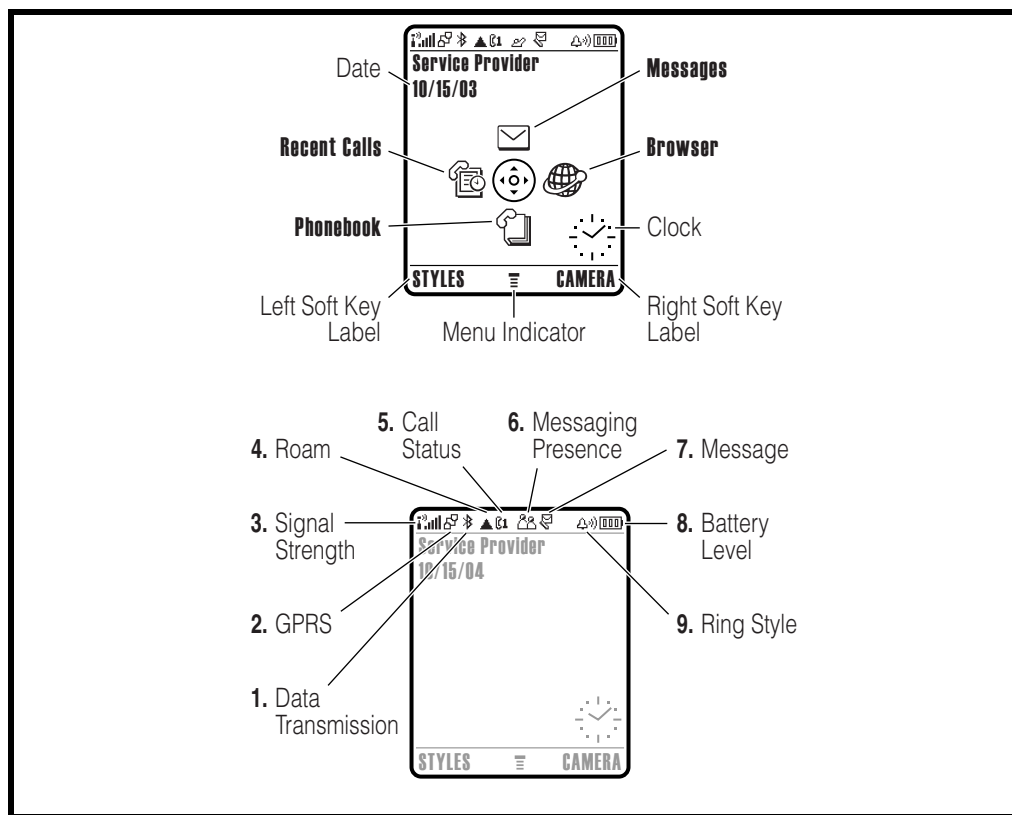

040146o, 040147o

Figure 2. Icon Indicators



Whether a phone displays all indicators depends on the programming and services to which the user subscribes.

Figure 2 shows some common icons displayed on the LCD.

- **Signal Strength Indicator.** Shows the strength of the phone's connection with the network. Calls cannot be sent or received when the "no signal" indicator is displayed.
- **In Use Indicator.** Appears when a call is in progress.
- **Roam Indicator.**⁵ Appears when the phone uses another network system outside the user's home network. When leaving the home network area, the phone roams, or seeks another network.
- **Message Waiting Indicator.**⁵ Appears when the phone receives a text message. This is a network-dependent feature.
- **Voice Message Waiting Indicator.**¹ Appears when a voicemail message is received. This is a network-dependent feature.

- **Battery Level Indicator.** Shows the amount of charge left in the battery. The more segments visible, the greater the charge. Recharge the battery as soon as possible when the Low Battery warning message appears.
- **Clock.** Shows the current date and time.
- **Menu Indicator.** Indicates the user can press the menu soft key to open a menu.
- **Alert Setting Indicator.** Shows the current selected alert. The default alert setting is a ringer.

User Interface Menu Structure

Table 1 shows the telephone menu structure.

Table 1. Menu Structure

Main Menu	Settings Menu
Phonebook Recent Calls - Received Calls - Dialed Calls - Notepad - Call Times * - Call Cost * - Data Times * - Data Volumes * Messages - Create Message - Email Msgs - Message Inbox - Voicemail - Browser Msgs - Info Services * - Quick Notes - Outbox - Drafts - MMS Templates Tools - SIM Tool Kit Apps * - Calculator - Datebook - Shortcuts - Alarm Clock - Dialing Services - Fixed Dial Games & Apps	Web Access - Browser - Web Shortcuts - Stored Pages - History - Go To URL - Browser Setup - Web Sessions Multimedia - Pictures - Camera - Sounds - Video Camera - Videos Bluetooth Link - Handsfree - Device History - Setup Settings (see next page)
* optional features This is the standard main menu layout. Your phone's menu may be a little different.	Personalize - Home Screen - Main Menu - Skin - Greeting - Wallpaper - Screen Saver Ring Styles - Style - style Detail Connection - Sync - USB Settings Call Forward * - Voice Calls - Fax Calls - Data Calls - Cancel All - Forward Status In-Call Setup - In-Call Timer - Call Cost Setup * - My Caller ID - Talk and Fax - Answer Options - Call Waiting Initial Setup - Time and Date 1-Touch Dial - Display Timeout - Backlight - TTY Setup * - Scroll - Language - Brightness - DTMF - Master Reset - Master Clear Phone Status - My Tel. Numbers - Credit Info/Available * - Active Line * - Battery Meter - Storage Devices - Other Information
	Headset - Auto Answer - Voice Dial Car Settings - Auto Answer - Auto Handsfree - Power-Off Delay - Charger Time Network - New Network - Network Setup - Available Networks - My Network List * - Service Tone * - Network Jingle * - Call Drop Tone Security - Phone Lock - Lock PTT Key - Lock Application - Fixed Dial - Restrict Calls * - Call Barring * - SIM PIN - New Passwords - Certificate Mgmt * Java Settings - Java System - Delete All Apps - App Vibration - App Volume - App Backlight PTT Settings - PTT Service * optional features

1. Network, subscription and SIM card or service provider dependent feature. Not available in all areas.

Alert Settings

V360 telephones include up to 32 preset alert tones and vibrations that can be applied to all alert events at the same time.



Pressing either volume key will mute the alert.

Battery Function

Battery Gauge

The telephone displays a battery level indicator icon in the idle screen to indicate the battery charge level. The gauge shows four levels: 100%, 66%, 33%, and Low Battery.

Battery Removal

Removing the battery causes the device to immediately shut down and any pending work (for example, partially entered phone book entries or outgoing messages) is lost.



To ensure proper memory retention, turn OFF the phone before removing the battery. Immediately replace the old battery with a fresh battery.



If the battery is removed while receiving a message, the message will be lost.

Operation

For detailed operating instructions, refer to the appropriate User's Guide listed in the Related Publications section toward the end of this manual.

Tools and Test Equipment

The following table lists tools and test equipment recommended for disassembly and reassembly of V360 telephones. Use either the listed items or equivalents.

Table 1. General Test Equipment and Tools

Motorola Part Number ¹	Description	Application
RSX4043-A	Torque Driver	Used to remove and replace screws
--	#0 Cross Point Screwdriver	Used to remove cross point screws in the flip assembly
—	Torque Driver Bit T-5 Plus, Apex 440-6IP Torx Plus or equivalent	Used with torque driver
See Table 7	Rapid Charger	Used to charge battery and to power device
0180386A82	Antistatic Mat Kit (includes 66-80387A95 antistatic mat, 66-80334B36 ground cord, and 42-80385A59 wrist band)	Provides protection from damage to device caused by electrostatic discharge (ESD)
6680388B67	Disassembly tool, plastic with flat and pointed ends (manual opening tool)	Used during assembly/disassembly of device
6680388B01	Tweezers, plastic	Used during assembly/disassembly
—	Digital Multimeter, HP34401A ²	Used to measure battery voltage
8102430Z04	GSM / DCS Test SIM	Used to enable manual test mode

1. To order in North America, contact Motorola Aftermarket and Accessories Division (AAD) at (800) 422-4210 or FAX (800) 622-6210; Internationally, AAD can be reached by calling (847) 538-8023 or faxing (847) 576-3023.
2. Not available from Motorola. To order, contact Hewlett Packard at (800) 452-4844.

Disassembly

The procedures in this section provide instructions for the disassembly of V360 telephones. Tools and equipment used for the phone are listed in Table 1, preceding.



Many of the integrated devices used in this equipment are vulnerable to damage from electrostatic discharge (ESD). Ensure adequate static protection is in place when handling, shipping, and servicing the internal components of this equipment.




Avoid stressing the plastic in any way to avoid damage to either the plastic or internal components.

Removing and Replacing the Battery Cover and Battery



All batteries can cause property damage and / or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

1. Ensure the phone is turned off.
2. Press in and hold the battery door latch as shown in Figure 1.

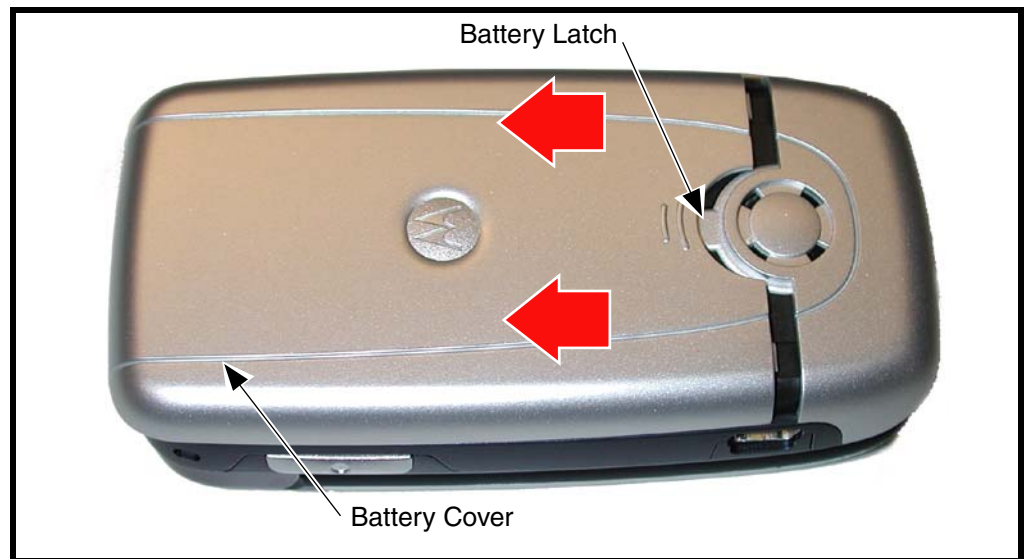

050315o

Figure 1. Removing the Battery Cover

3. Slide the battery cover away from the latch and lift it completely off the phone.

4. Lift the end of the battery out first, then slide the entire battery from the phone. See Figure 2.

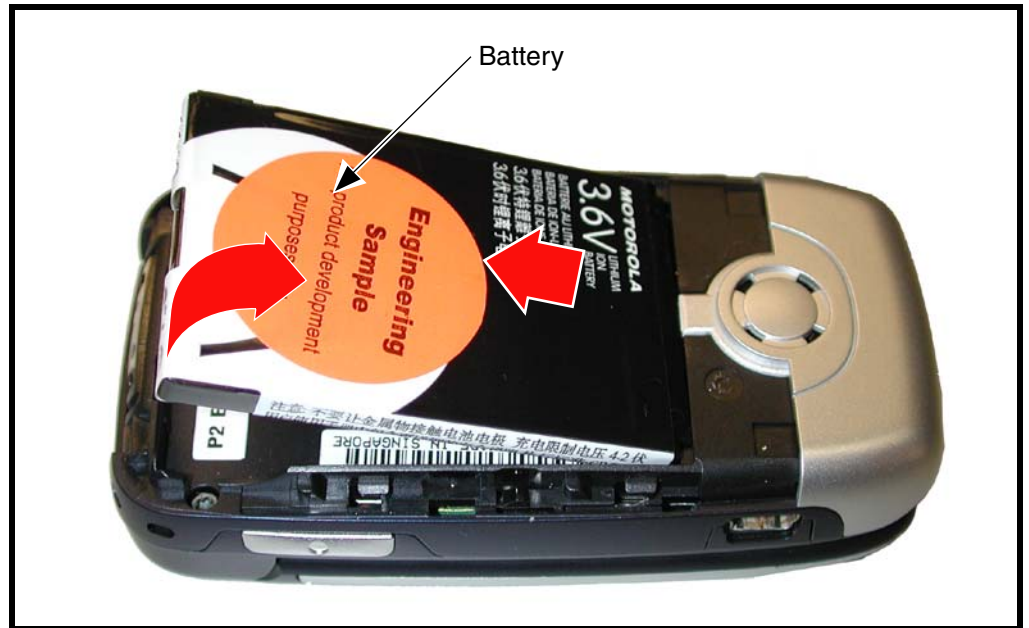


Figure 2. Removing the battery




There is a danger of explosion if the Lithium Ion battery is replaced incorrectly. Replace only with the same type of battery or equivalent as recommended by the battery manufacturer. Dispose of used batteries according to the manufacturer's instructions.

5. To replace, align the battery with the battery compartment so the contacts on the battery match the battery contacts in the phone.
6. Insert the battery, contacts side first, into the battery compartment and push down followed by the opposite edge of the battery.
7. Align the battery cover to the rear housing, then slide the battery cover up until it snaps into place.

Removing and Replacing the Subscriber Identity Module (SIM)

1. Remove the battery cover and battery as described in the procedures.
2. Slide the SIM latch away from the SIM and then lift the SIM card out of the phone as shown in Figure 3.

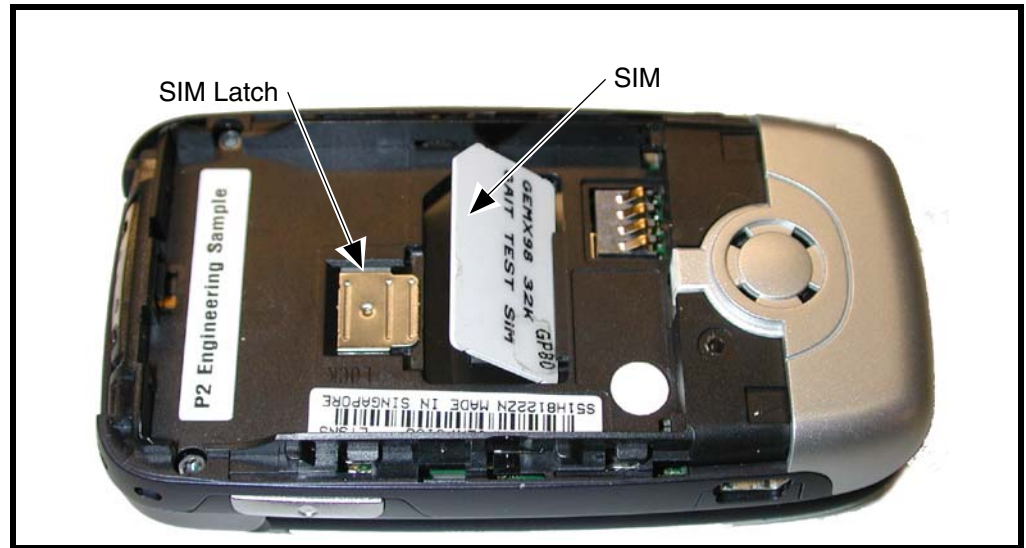

050317o

Figure 3. Removing the SIM

3. To replace, insert the SIM into the holder, ensuring the keyed corner of the SIM faces the outer edge of the phone.
4. Replace the battery and battery cover as described in the procedures.

Removing and Replacing the Antenna Cap

1. Remove the battery cover, battery, and SIM as described in the procedures.
2. Use the disassembly tool to release the antenna cap latch as shown in Figure 3.

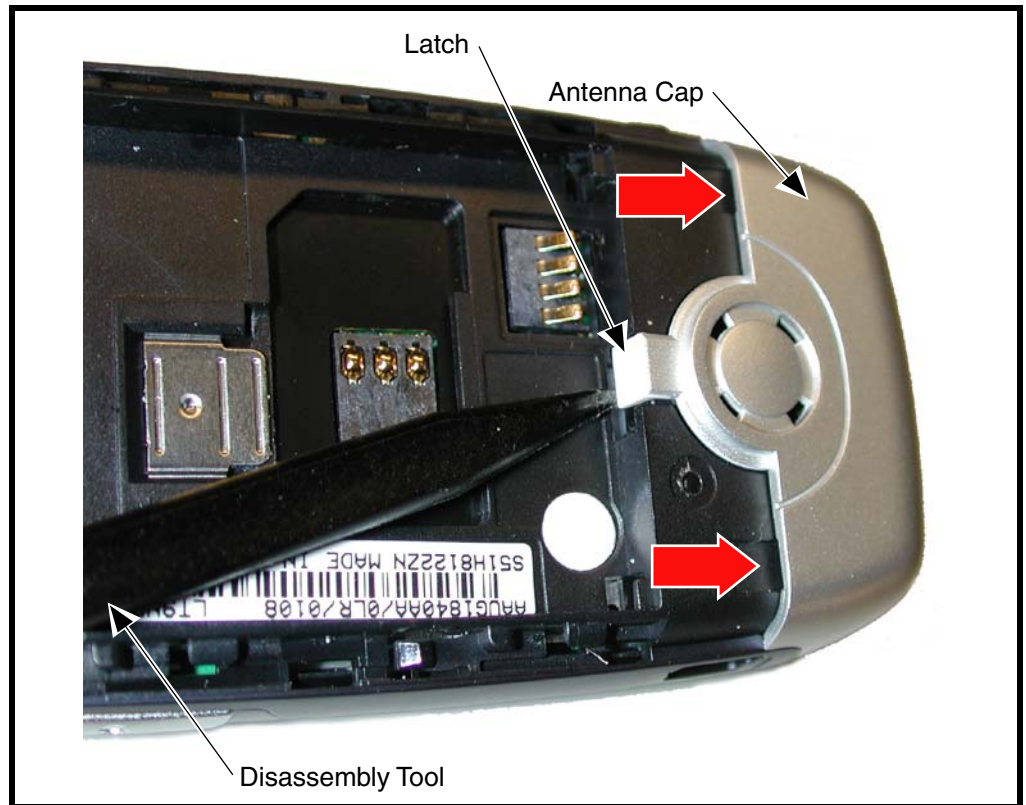


Figure 4. Removing the Antenna Cap

050318o

3. Insert the disassembly tool in the slots on each side of the antenna cap as shown by the red arrows in Figure 4. Carefully release the snaps on each side of the phone under the antenna cap.
4. To replace, align the antenna cap the phone and lower into place. Press down on the antenna cap gently but firmly to engage the snaps.
5. Replace the SIM, battery and battery cover as described in the procedures.

Removing and Replacing the Rear Housing




This product contains static-sensitive devices. Use anti-static handling procedures to prevent electrostatic discharge (ESD) and component damage.

1. Remove the battery cover, battery, SIM, and antenna cap as described in the procedures.



In addition to 4 screws, the rear housing assembly is fastened with plastic latches. These are fragile and should be released with care.

2. Using a Torx driver with a T-6 bit, remove the 4 screws at each corner of the phone. Retain the screws for reassembly. See Figure 5.

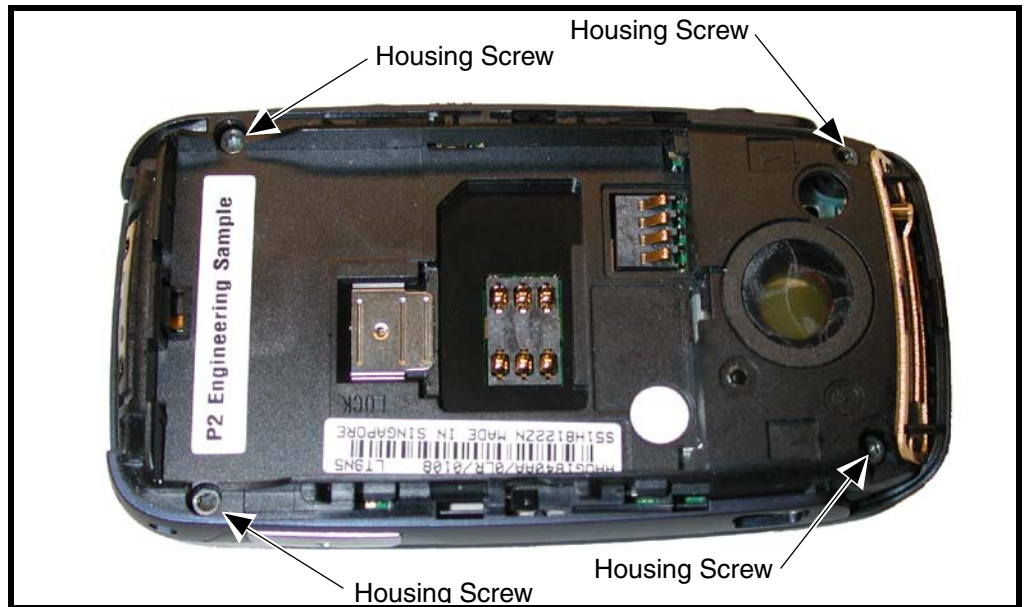

050321o

Figure 5. Removing the rear housing screws

3. Release the four housing latches by inserting the pointed end of the plastic disassembly tool into the openings on the rear housing.

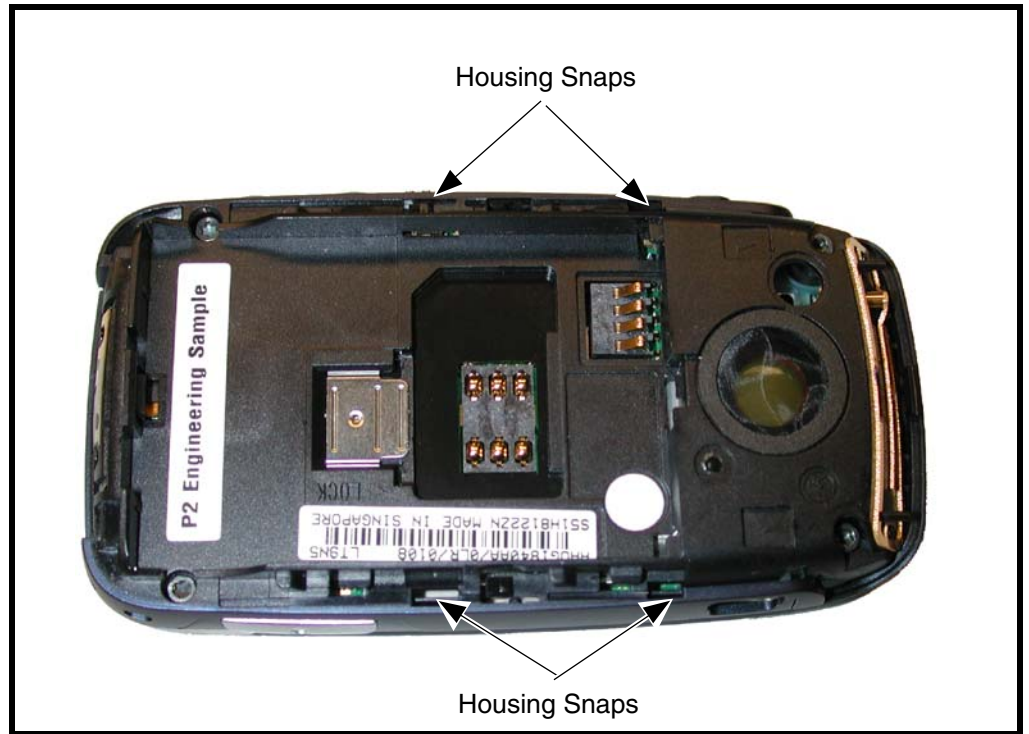



Figure 6. Removing the Rear Housing Latches

0503220

4. Carefully lift the rear housing away from the phone.
5. To replace, align the housing latches with the corresponding openings on the front housing. Gently press the housings together until the catches snap into place.
6. Replace the 4 housing screws and tighten to a final torque setting of 16 Ncm (1.5 inch pounds). Do not over tighten.
7. Replace the antenna cap, SIM, battery, and battery cover as described in the procedures.

Removing and Replacing the Microphone

1. Remove the battery cover, battery, SIM, antenna cap and rear housing assembly as described in the procedures.
2. Use the plastic tweezers or plastic hand tool to pry the microphone out of its socket and carefully remove from the front housing. See Figure 7.

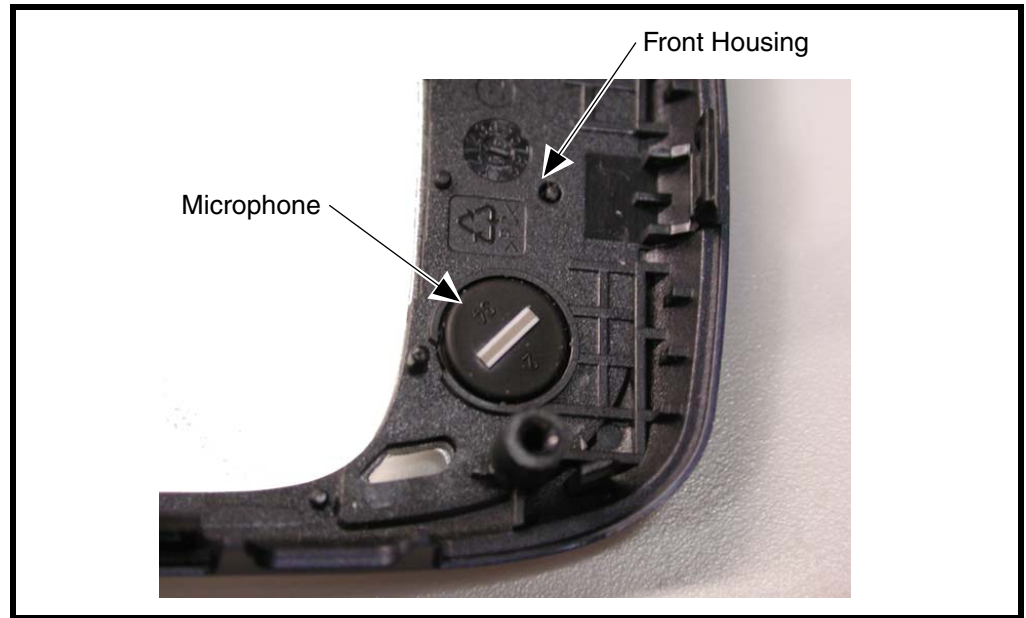

050344o

Figure 7. Removing the Microphone


3. To replace, use the plastic tweezers to place the microphone into its socket on the front housing. Ensure that the elastomeric connector is facing upward.
4. Replace the rear housing, antenna cap, SIM, battery and battery cover as described in the procedures.

Removing and Replacing the Transceiver Board Assembly



This product contains static-sensitive devices. Use anti-static handling procedures to prevent electrostatic discharge (ESD) and component damage.

1. Remove the battery cover, battery, SIM, antenna cap, and rear housing as described in the procedures.
2. Use the disassembly tool to unseat the display flex connector from its socket (see Figure 8).

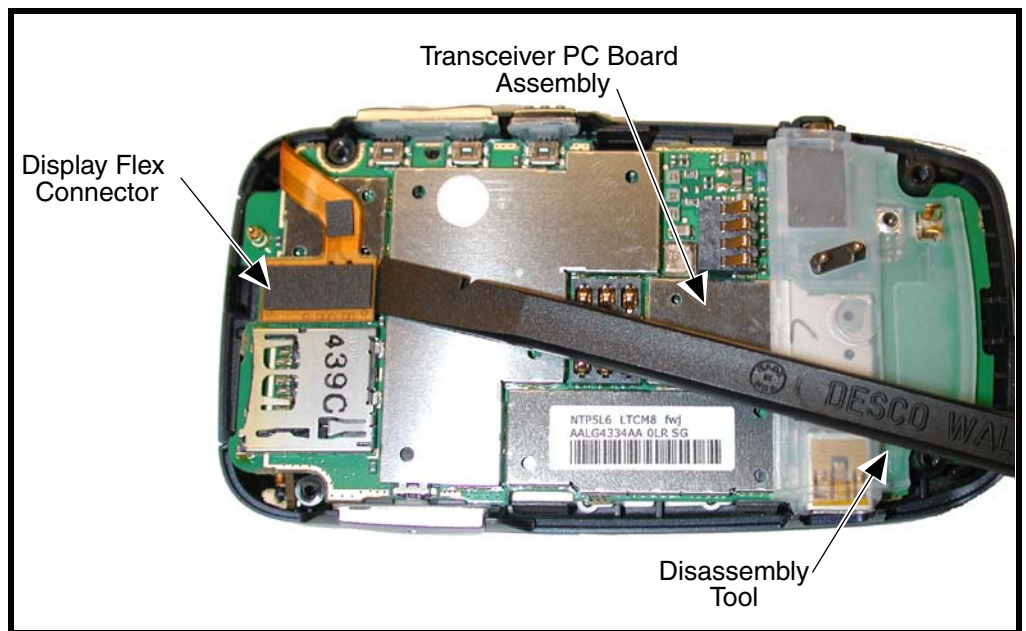


050324o

Figure 8. Removing the Transceiver PC board Assembly

3. To replace, align the transceiver board assembly to the phone.
4. Carefully place the transceiver board assembly into the front housing.
5. To replace, carefully align the flex connector to its socket on the transceiver PC board assembly, then gently press down on the flex connector until properly seated in its socket.
6. Replace the rear housing, SIM, battery, and battery cover as described in the procedures.

Removing and Replacing the Flip Assembly

1. Remove the battery cover, battery, SIM, antenna, rear housing, and transceiver board assembly as described in the procedures.
2. Flex the right side of the front housing assembly to allow the flip assembly hinge to separate from the knuckle (see Figure 9).

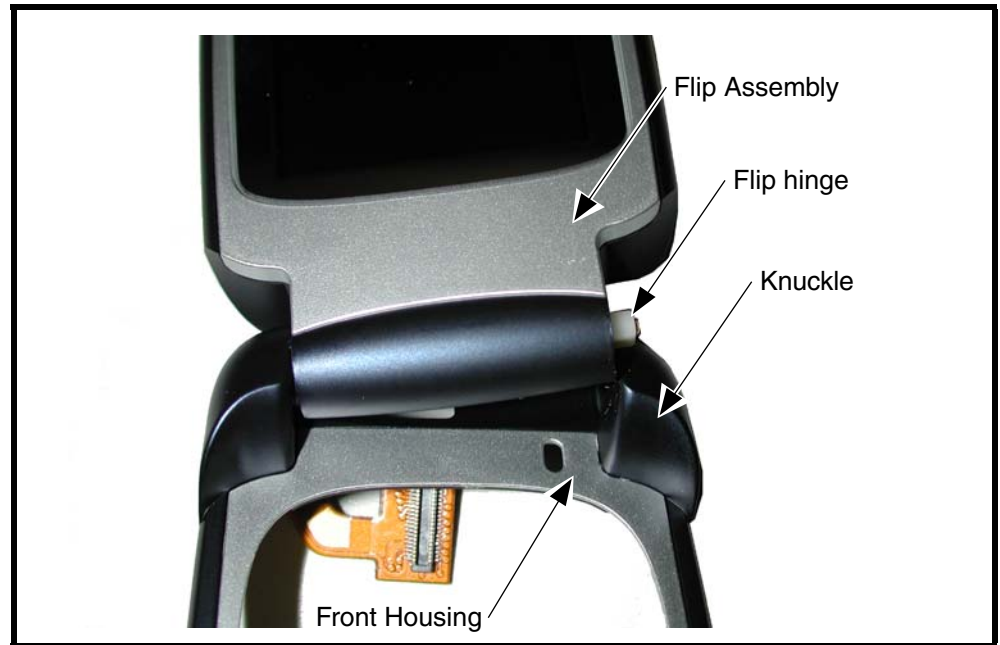

050345o

Figure 9. Removing the Flip Assembly



The flexible printed cable (FPC) (flex) is easily damaged. Exercise extreme care when handling.

3. Carefully remove the flip assembly from the left knuckle on the front housing. Use extreme caution when removing the display flex from the front housing (see Figure 10).

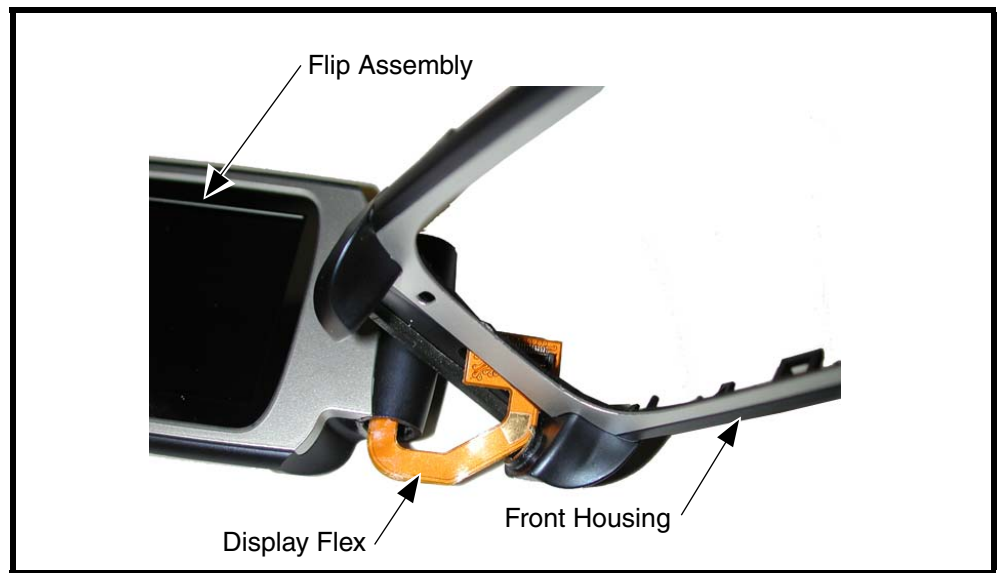


Figure 10. Removing the Flip Assembly

4. To replace, slide the flex connector through the narrow opening on the front of the front housing.
5. Insert the left side of the flip assembly into the left knuckle on the front housing.
6. Carefully bend the right knuckle on the front housing to insert the flip hinge into the right knuckle. Ensure that the flip opens and closes easily.
7. Replace the transceiver board assembly, rear housing, SIM, battery, and battery cover as described in the procedures.

Removing and Replacing the Flip Assembly Bezel

1. Remove the battery cover, battery, SIM, antenna, rear housing, transceiver board assembly, and flip assembly as described in the procedures.
2. Insert the disassembly tool into the openings on the flip bezel to pry up the flip bezel.
3. Slide the edge of the disassembly tool along the sides of the flip bezel to release the bezel snaps. Be careful not to damage the flip bezel (see Figure 11).

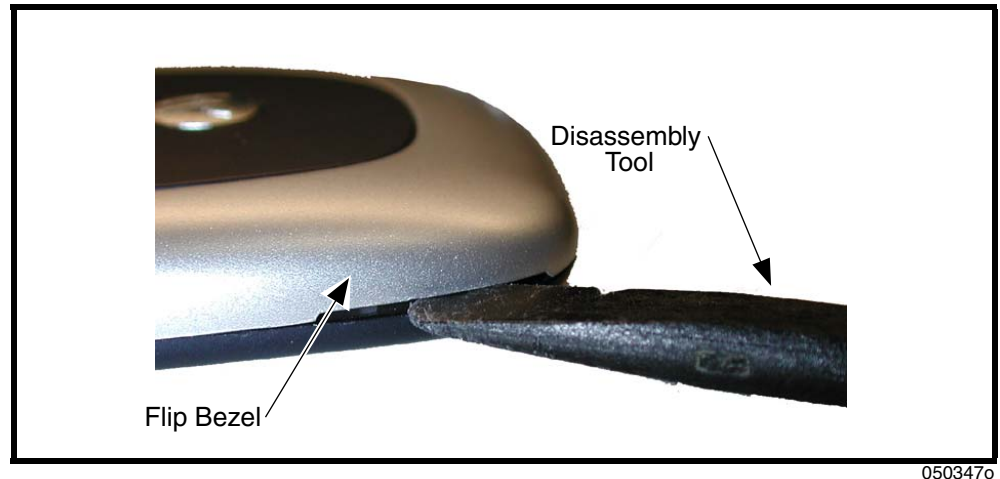


Figure 11. Removing the Flip Bezel

4. To replace, align the flip bezel to the flip assembly. Gently press the bezel onto the flip assembly until all the snaps have engaged and the bezel is properly seated on the flip assembly.
5. Replace the flip assembly, transceiver board assembly, rear housing, SIM, battery, and battery cover as described in the procedures.

Removing and Replacing the Display Assembly

1. Remove the battery cover, battery, SIM, antenna, rear housing, transceiver board assembly, flip assembly, and flip assembly bezel as described in the procedures.
2. Use the Torx driver and a T6 bit to remove the 2 flip screws from the flip assembly (see Figure 12).

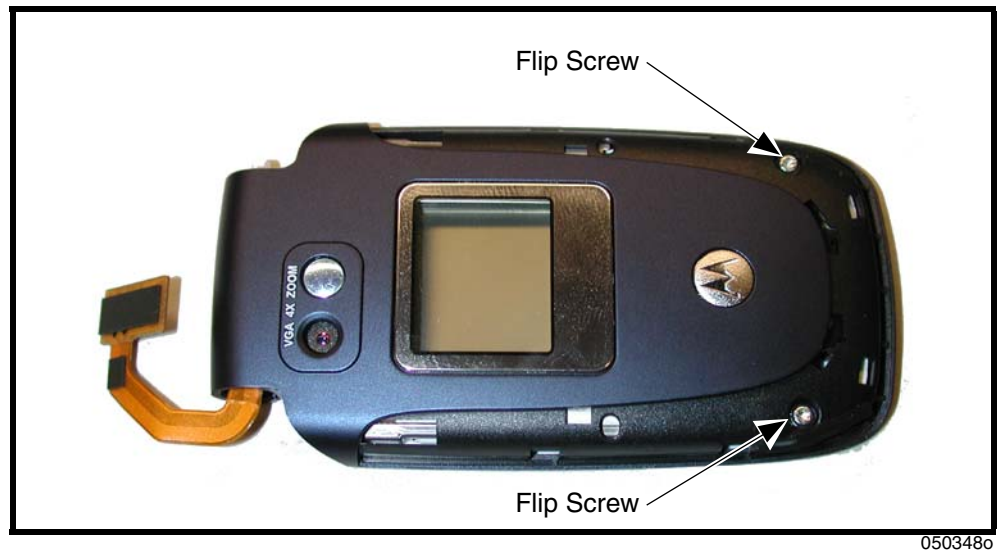


Figure 12. Removing the Flip Assembly Screws

3. Insert the disassembly tool between the display module and the flip housing and pry the display assembly up from the flip housing (see Figure 13).

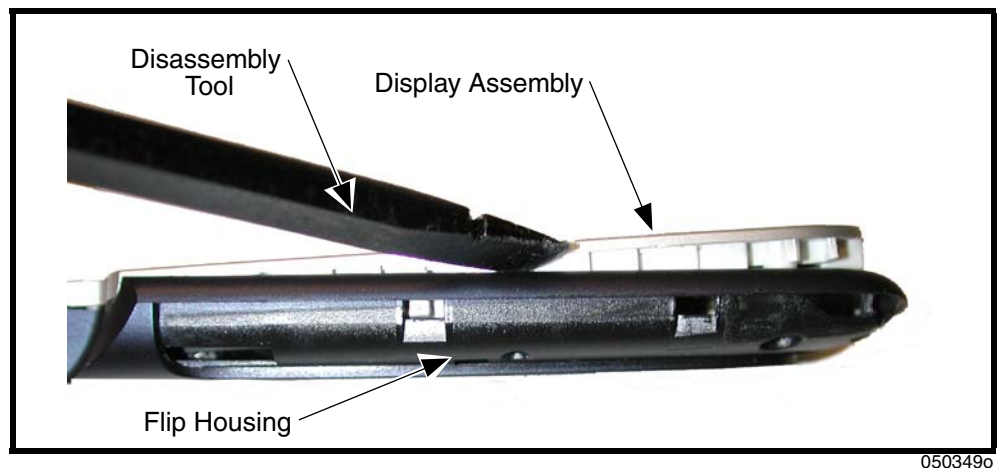


Figure 13. Removing the Flip Display Assembly

4. Carefully lift the flip display assembly out of the flip housing.

5. Remove 2 T6 screws from the display bracket. Set the screws aside for reuse (see Figure 14).

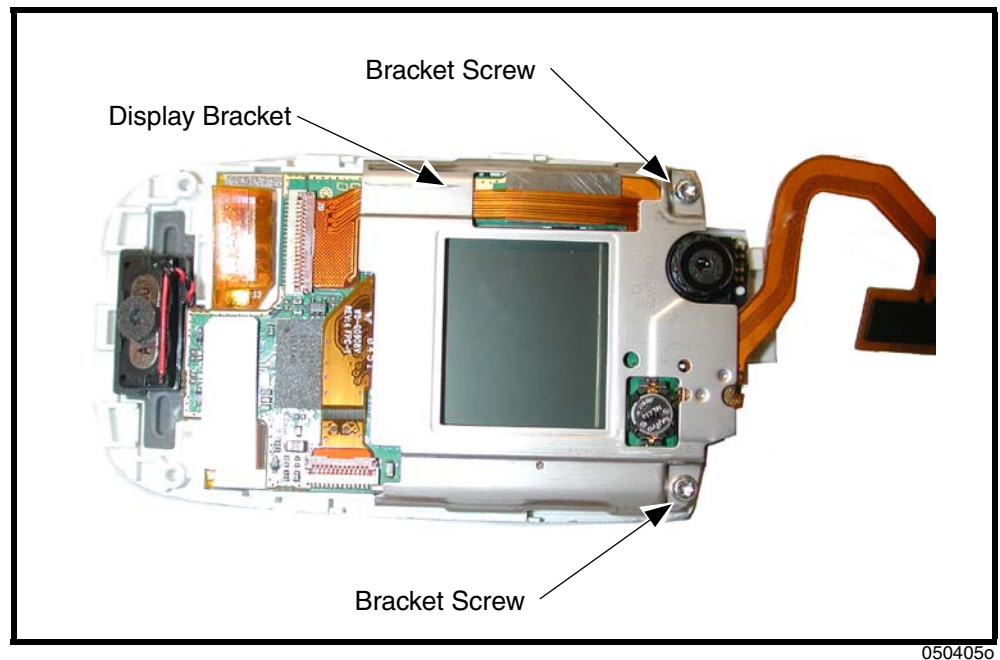


Figure 14. Removing the Flip Display Bracket Screws

6. Use the disassembly tool to release the latches on the sides of the display assembly (see Figure 14).

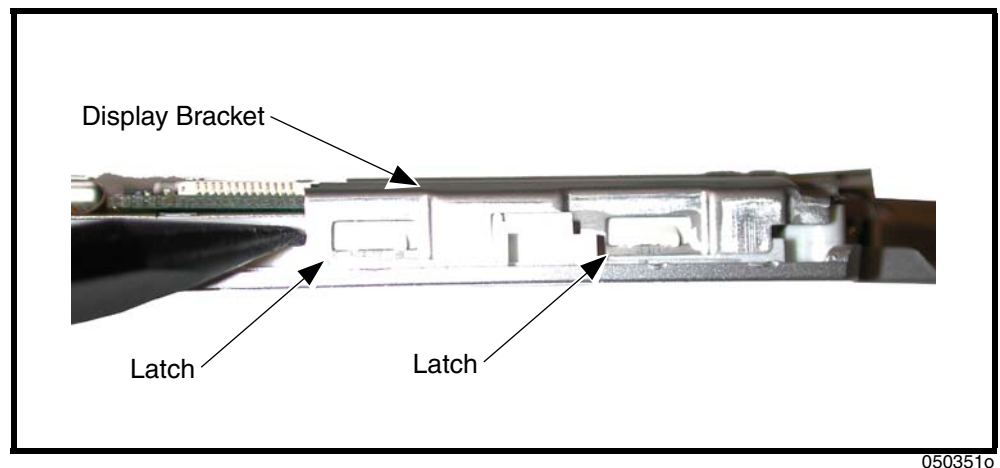


Figure 15. Removing the Flip Display Assembly Bracket

7. Carefully lift the display bracket up and away from the display assembly.
8. To replace, align the display bracket over the display assembly.
9. Carefully and gently lower the display bracket onto the display assembly. Press the display bracket into place so that all the latches are attached to the display assembly.

10. Insert and tighten the two T6 display bracket screws to torque setting of 16 Ncm.
11. Place the display assembly into the flip housing and gently press down until all the catches are engaged and the flip display lens is flush with the flip housing.
12. Insert and tighten the two T6 flip assembly screws to a torque setting of 16 Ncm. Do not overtighten.
13. Replace the flip assembly bezel, flip assembly, transceiver board assembly, rear housing, antenna cap, SIM, battery, and battery cover as described in the procedures.

Removing and Replacing the Camera Assembly

1. Remove the battery cover, battery, SIM, antenna, rear housing, and transceiver board assembly, flip assembly cover, and as described in the procedures.



The flexible printed cable (FPC) (flex) is easily damaged. Exercise extreme care when handling.

2. Unlock the ZIF connector and remove the camera assembly flex connector.
3. Carefully lift the camera assembly and flex out of the display assembly (see Figure 16).

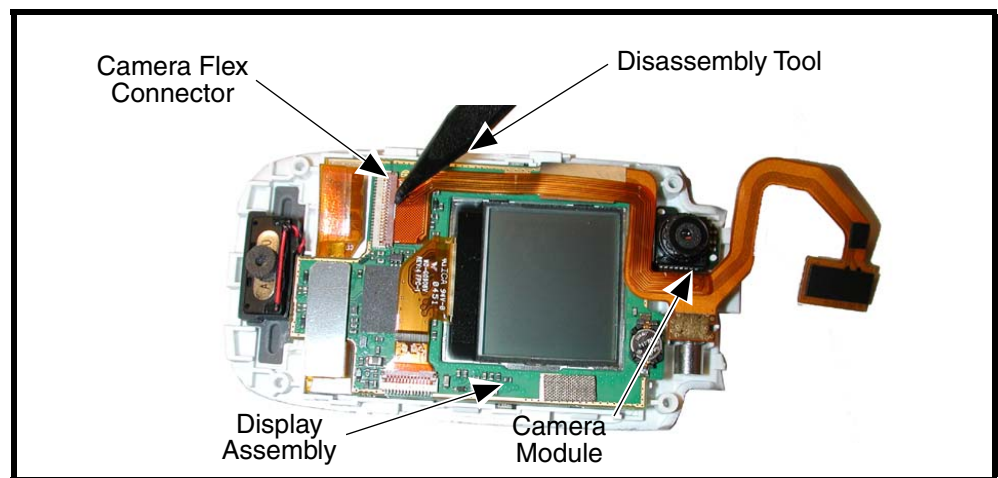


Figure 16. Camera Assembly Removal

4. To replace, carefully press the camera assembly into its slot in the flip display assembly.
5. Insert the end of the camera assembly flex cable into its slot in the ZIF connector on the flip display assembly. Avoid damage to the flex cable.
6. Replace the flip display assembly, flip assembly bezel, flip assembly, transceiver board assembly, rear housing, antenna cap, SIM, battery, and battery cover as described in the procedures.

Removing and Replacing the Motor Vibrator Assembly

1. Remove the battery cover, battery, SIM, antenna, rear housing, and transceiver board assembly, flip assembly cover, and CLI lens cover as described in the procedures.



The flexible printed cable (FPC) (flex) is easily damaged. Exercise extreme care when handling.

2. Use the disassembly tool to unseat the flex connector and remove the camera assembly flex connector from its socket.
3. Carefully lift the motor/vibrator assembly and flex from the display assembly (see Figure 17).

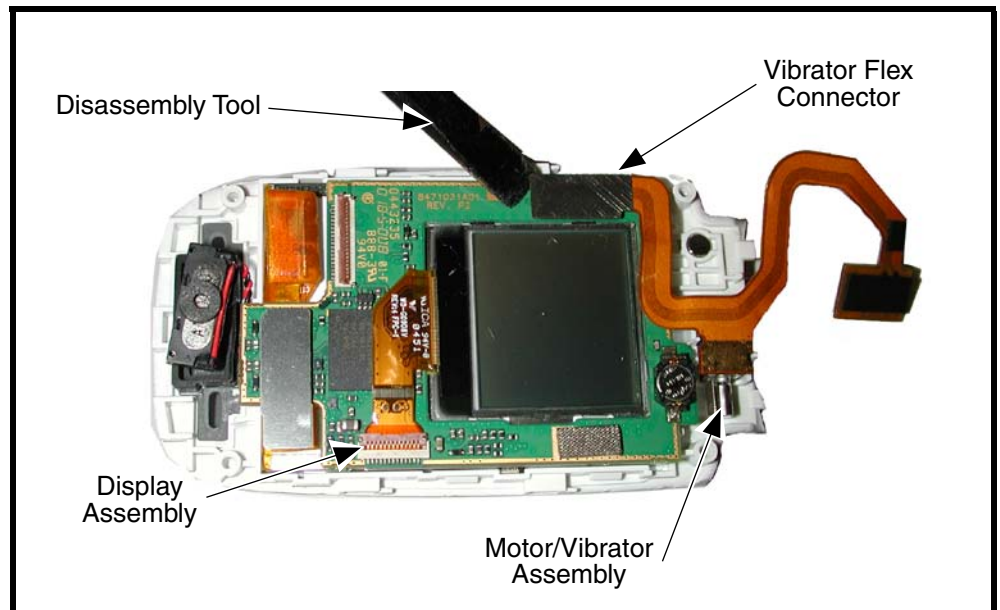


Figure 17. Motor/Vibrator Assembly Removal

4. To replace, align the motor/vibrator connector to the connector socket.
5. Gently but firmly press the flex connector into its socket until properly seated.
6. Replace the camera assembly, display assembly, flip assembly bezel, flip assembly, transceiver board, rear housing, antenna cap, SIM, battery, and battery cover as described in the procedures.

Removing and Replacing the Display Module Assembly

1. Remove the battery cover, battery, SIM, rear housing, antenna, transceiver board assembly, flip assembly cover, and camera assembly, as described in the procedures.



The flexible printed cable (FPC) (flex) is easily damaged. Exercise extreme care when handling.

2. Use the disassembly tool to unseat the display module assembly from the front housing (see Figure 18)

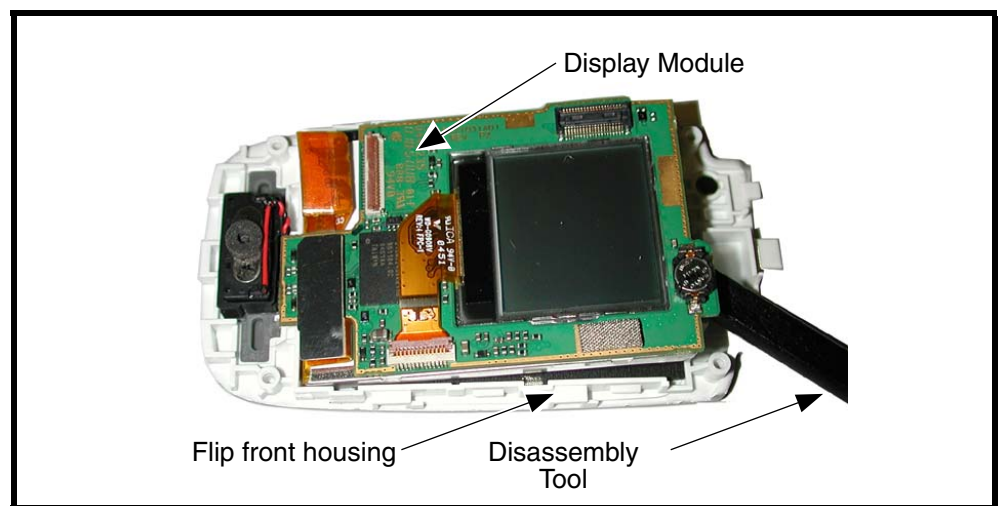


Figure 18. Display Module Assembly

3. Avoid damage to the flex while carefully removing the display module assembly from the flip assembly.
4. Carefully lift the display lens away from the flip assembly.
5. To replace, align the display module assembly to the flip assembly.
6. Carefully lower the display module into the flip assembly. Ensure that none of the display assembly components are damaged.
7. Replace the motor/vibrator flex assembly, camera assembly, flip assembly bezel, flip assembly, transceiver board, rear housing, antenna cap, SIM, battery, and battery cover as described in the procedures.

Subscriber Identity Module (SIM) and Identification

SIM Card

A SIM is required to access the existing local GSM network, or remote networks when traveling (if a roaming agreement has been made with the provider).

The SIM contains:

- All the data necessary to access GSM services.
- The ability to store user information such as phone numbers.
- All information required by the network provider to provide access to the network.

Personality Transfer

A personality transfer is required when a phone is express exchanged or when the main board is replaced. Personality transfers reproduce the customer's original personalized details such as menu and stored memory such as phone books, or even just program a unit with basic user information such as language selection. V360 telephones use TrueSync® synchronization software to effect a personality transfer.

Identification

Each Motorola GSM device is labeled with a variety of identifying numbers. The following information describes the current identifying labels.

Mechanical Serial Number (MSN)

The Mechanical Serial Number (MSN) is an individual unit identity number and remains with the unit throughout the life of the unit.

The MSN can be used to log and track a unit on Motorola's Service Center Database. The MSN is divided into 4 sections as shown in Figure 19.

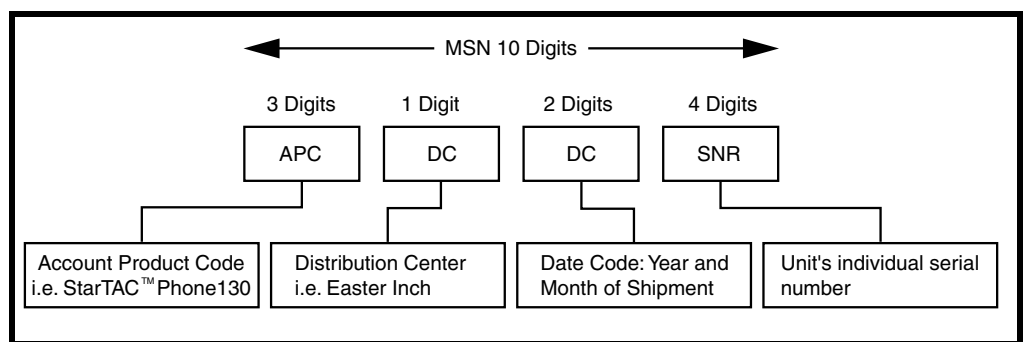


Figure 19. MSN Label breakdown

000807a

International Mobile Station Equipment Identity (IMEI)

The International Mobile station Equipment Identity (IMEI) number is an individual number unique to the PCB and is stored within the unit's memory.

The IMEI uniquely identifies an individual mobile station and thereby provides a means for controlling access to GSM networks based on mobile station types or individual units. The full IMEI structure is listed in Table 2.

Table 2. IMEI Number Breakdown

TAC	Serial Number	Check Digit
NNXXXX YY	ZZZZZZ	A

Where

TAC Type Allocation Code, formerly known as Type Approval Code

NN Reporting body identifier

XXXX Type Identifier

YY YY is set to 00 from 01/01/2003 until 31/03/2004

ZZZZZZ Individual unit serial number

A Phase 1 = 0.
Phase 2 = check digit defined as a function of all other IMEI digits

Other label number configurations present are:

- **TRANSCEIVER NUMBER:** Identifies the product type. Normally the SWF number. (i.e. V100).
- **PACKAGE NUMBER:** Identifies the equipment type, mode, and language in which the product is shipped.

Troubleshooting

Manual Test Mode

Motorola V360 telephones are equipped with a manual test mode capability. This allows service personnel to verify functionality and perform fault isolation by entering keypad commands.

To enter the manual test command mode, a GSM / DCS test SIM must be used.

1. Press  to turn the phone OFF.
2. Remove the battery as described in the procedures.
3. Remove the customer's SIM card from the phone as described in the procedures.
4. Insert the test SIM into the SIM slot.
5. Replace the battery as described in the procedures.
6. Press  to turn the phone ON.

Manual Test Mode Commands

Table 3. Manual Test Commands

Key Sequence	Test Function/Name	Remarks
<Menu>048263*	Enter manual test mode	
"End" Key	Exit manual test mode	
54*	Suspend	Required for all Test Mode Operations
0*0*0	Select tone 0	
0*0*1	Select tone 1	
0*0*2	Select tone 2	
0*0*3	Select tone 3	
0*0*4	Select tone 4	
0*0*5	Select tone 5	
0*0*6	Select tone 6	
0*0*7	Select tone 7	
0*0*8	Select tone 8	
0*0*9	Select tone 9	
0*1*X	Disable tone X	
3*0*1	Enable vibrator	
3*0*0	Disable vibrator	
5*0*0	Set audio level 0	
5*0*1	Set audio level 1	
5*0*2	Set audio level 2	
5*0*3	Set audio level 3	
5*0*4	Set audio level 4	

Table 3. Manual Test Commands (Continued)

Key Sequence	Test Function/Name	Remarks
5*0*5	Set audio level 5	
5*0*6	Set audio level 6	
5*0*7	Set audio level 7	
5*0*8	Set audio level 8	
5*0*9	Set audio level 9	
5*0*10	Set audio level 10	
5*0*11	Set audio level 11	
5*0*12	Set audio level 12	
5*0*13	Set audio level 13	
5*0*14	Set audio level 14	
5*0*15	Set audio level 15	
6*2*2*0*0	Set Audio Path. Int Mic, IntSpk, RX unmute, TX unmute	
6*4*6*0*0	Set Audio Path. Boom Mic, Boom Spk, RX unmute, TX unmute	
10*0*3	Set band GSM 900	
10*0*4	Set band DCS 1800	
10*0*5		
10*0*6	Set dual band GSM 900 / 1800	
10*1*0	Read band	3= GSM 4= DCS 5= PCS 6 =GSM/DCS
18*0	Initialize non-volatile memory (Master Reset)	
18*1	Initialize non-volatile memory (Master Clear)	
55*2*001	Test Display. All pixels ON	
55*2*000	Test Display. All pixels OFF	
55*2*002	Test Display. Checkerboard pattern A	
55*2*003	Test Display. Checkerboard pattern B	
55*2*004	Test Display. Border pixels ON	
*#06#	IMEI Check	No Test Mode Required
Phone Set up --> Phone Status --> Other Information	Flex Version / Technology / S-W Version / Readiness Status	No Test Mode Required

Troubleshooting Chart

Table 4. Level 1 and 2 Troubleshooting Chart

SYMPTOM	PROBABLE CAUSE	VERIFICATION AND REMEDY
1. Telephone will not turn on or stay on.	a) Battery either discharged or defective.	Measure battery voltage across a 50 ohm (>1 Watt) load. If the battery voltage is <3.25 Vdc, recharge the battery using the appropriate battery charger. If the battery will not recharge, replace the battery. If battery is not at fault, proceed to b.
	b) Battery connectors open or misaligned.	Visually inspect the battery connectors on both the battery and the telephone. Realign and, if necessary, either replace the battery or refer to a Level 3 Service Center for the battery connector replacement. If battery connectors are not at fault, proceed to c.
	c) Transceiver board assembly defective.	Remove the transceiver board assembly. Substitute a known good assembly and temporarily reassemble the unit. Press and hold the PWR button; if unit turns on and stays on, disconnect the dc power source and reassemble the telephone with the new transceiver board assembly. Verify that the fault has been cleared.
2. Telephone exhibits poor reception or erratic operation such as calls frequently dropping or weak or distorted audio.	a) Antenna assembly defective.	Check to make sure that the antenna pin is properly connected to the transceiver board assembly. If connected properly, substitute a known good antenna. If the fault is still present, proceed to b.
	b) Transceiver board assembly defective.	Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble the unit with the new transceiver board assembly.
3. Display is erratic, or provides partial or no display.	a) Transceiver board connections faulty.	Remove rear chassis assembly from unit, check general condition of flexible printed cable (flex). If the flex is good, check that the flex connector is fully pressed down. If not, check connector to transceiver board connections. If faulty connector, replace the transceiver board assembly. If connector is not at fault, proceed to b.
	b) Flip assembly defective.	Temporarily replace the flip assembly with a known good assembly. If fault has been cleared, reassemble with the new flip assembly. If fault not cleared, proceed to c.
	c) Transceiver board assembly defective.	Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble the unit with the new transceiver board assembly.
4. Incoming call alert transducer audio distorted or volume is too low.	Faulty transceiver board assembly.	Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble the unit with the new transceiver board assembly.

Table 4. Level 1 and 2 Troubleshooting Chart (Continued)

SYMPTOM	PROBABLE CAUSE	VERIFICATION AND REMEDY
5. Telephone transmit audio is weak. (usually indicated by called parties complaining of difficulty in hearing voice).	a) Transceiver board assembly defective.	Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble the unit with the new transceiver board assembly.
6. Receive audio from earpiece speaker is weak or distorted.	a) Connections to or from transceiver board assembly defective.	Gain access to the transceiver board assembly as described in the procedures. Check flex and the flex connector from the flip assembly to the transceiver board assembly. If flex is at fault, replace flip assembly. If flex connector is at fault, proceed to d. If connection is not at fault, proceed to b.
	b) Flip assembly defective.	Temporarily replace the flip assembly with a known good assembly. If fault has been cleared, reassemble with the new flip assembly. If fault not cleared, proceed to c.
	c) Antenna assembly defective.	Check to make sure the antenna is installed correctly. If the antenna is installed correctly, substitute a known good antenna assembly. If this does not clear the fault, reinstall the original antenna assembly and proceed to d.
	d) Transceiver board assembly defective.	Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble with the new transceiver board assembly.
7. Telephone will not recognize or accept SIM.	a) SIM defective.	Check the SIM contacts for dirt. Clean if necessary and check if fault has been cleared. If the contacts are clean, insert a known good SIM into the telephone. Power up the unit and confirm that the SIM has been accepted. If the fault no longer exists, replace the defective SIM. If the SIM is not at fault, proceed to b.
	b) Transceiver board assembly defective.	Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble the unit with the new transceiver board assembly.
8. Phone does not sense when flip is opened or closed (usually indicated by inability to answer incoming calls by opening the flip, or inability to make outgoing calls).	a) Keypad assembly defective.	Check keypad for dirt or defects. Temporarily replace the keyboard assembly with a known good assembly. If fault has been cleared, reassemble with the new keypad assembly. If fault not cleared, proceed to b.
	b) Transceiver board assembly defective.	Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble the unit with the new transceiver board assembly.

Table 4. Level 1 and 2 Troubleshooting Chart (Continued)

SYMPTOM	PROBABLE CAUSE	VERIFICATION AND REMEDY
9. Vibrator feature not functioning.	Flip motor/vibrator flex assembly defective.	Replace the flip motor/vibrator flex assembly. Verify that the fault has been cleared and reassemble the unit with the new flip motor/vibrator flex assembly.
10. Internal Charger not working.	Faulty charger circuit on transceiver board assembly.	Test a selection of batteries in the rear pocket of the desktop charger. Check LED display for the charging indications. If these are charging properly, then the internal charger is at fault. Replace the transceiver board assembly (refer to 1c). Verify that the fault has been cleared and reassemble the unit with the new transceiver board assembly.
11. Real Time Clock resetting when standard battery is removed.	Lithium button cell in the display board may be depleted.	Refer service to a Level 3 service center for replacement.

Programming: Software Upgrade and Flexing

Contact your local technical support engineer for information about equipment and procedures for flashing and flexing. Part Numbers


The following information is provided as a reference for the parts associated with V360 telephones.

Related Publications

Motorola V360 User's Guide, English

68XXXXXX96

Exploded View Diagram

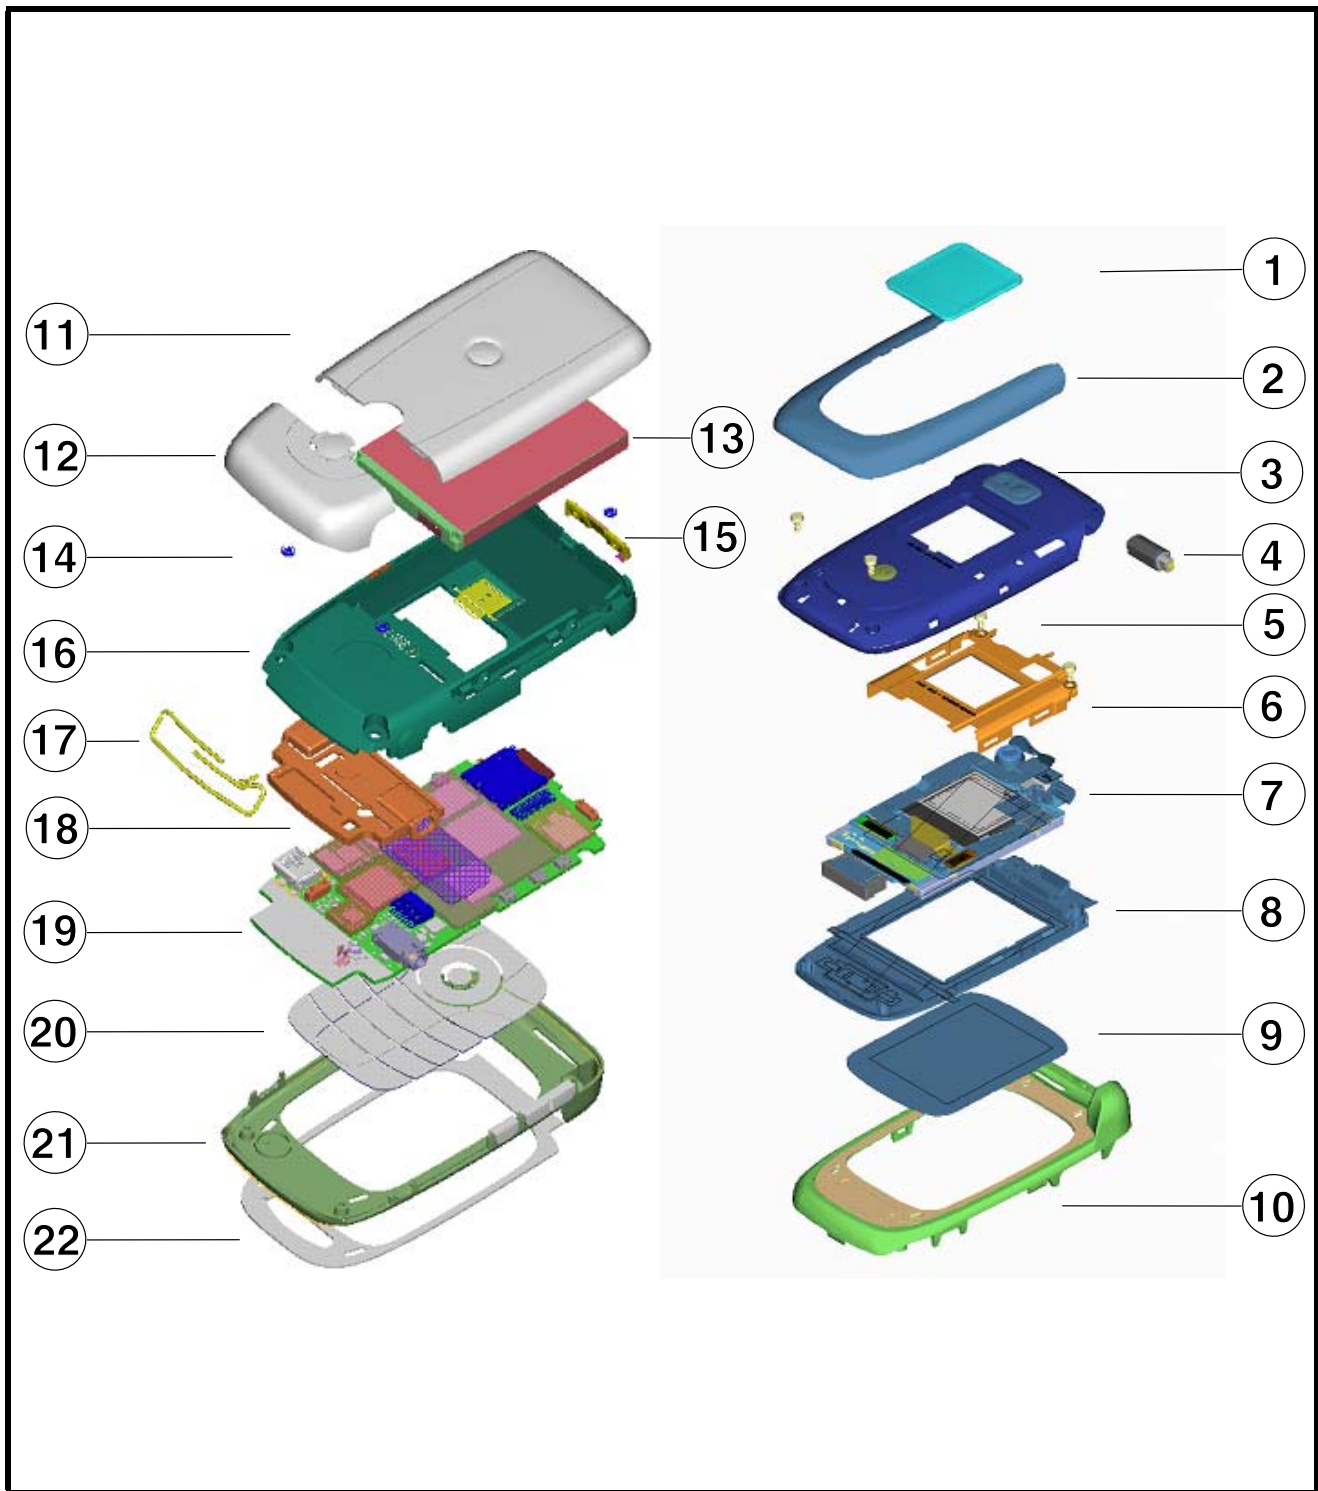

0318260

Figure 20. Exploded View Diagram

Exploded View Parts List

Table 5. Exploded View Parts List

Item Number	Part Number	Description
1	0170387Z01	CLI Lens Assembly
2	1571058A01	Flip Cover
3	0170387W01	Flip Top Assembly
4	5590242N03	Hinge
5	0370303E03	Flip Screw (4X)
6	0170387R01	Flip Frame Assembly
7	AALG4324AA	Flip PCB Assembly
8	0170387U01	Flip Bottom Assembly
9	6171139A01	Flip Main Lens Assembly
10	0170387X01	Transceiver Front Housing Ass'y
11	AAHN5598A	Battery Door Kit 4mm
11	AAHN5599A	Battery Door Kit 6mm
12	0170387T01	Rear Housing Cap
13	SNN5766	Battery 810 mAh
13	-----	Battery 1010 mAh

Item Number	Part Number	Description
14	0309315B27	Housing Screws (4X)
15	8571120A01	Bluetooth Antenna
16	AAHN5597A	Rear Housing
17	8571119A03 8571119A02	Wire Antenna GSM850 Wire Antenna
18	3271049A01	Gasket Midi Speaker Seal
19	--	Transceiver PCBA
20	AAYN4561A	Keypad
21	0102733J72	XCVR Front Housing Assembly
22		

To order parts please use the following Link:

https://wissc.motorola.com/wissc_root/main/BrowserOK.html

(Password is Required)

For information on ordering parts please contact EMEA at + 49 461 803 1638.



There is a danger of explosion if the Lithium Ion battery pack is replaced incorrectly. Replace only with the same type of battery or equivalent as recommended by the battery manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Model Dependant Part Numbers

Table 6. Model Dependant Part Numbers

	V361 Silver/Silver (1A)	V360 Silver/Blue (1C)	V360 Silver/Black (1B)	V360 Silver/Silver (1C)
Transceiver Front Housing	0170387X01	0170387L01		0170387L02
Transceiver Rear Housing	AAHN5597A	0170387L02		0170387H02
Battery Cover	AAHN5598A 4mm AAHN5599A 6mm	AAHN5589A 4mm AAHN5590A 6mm		AAHN5589A 4mm AAHN5590A 6mm
Rear Cap	0170387T01			
Flip Front Housing	AAHN5596A	0170387H01		0170387J02
Flip Rear Housing		0170387K01		0170387K01
Keypad	AAYN4561A	AAYN4548A		AAYN4581A
CLI Lens Kit	AAHN5609A	0170387S01		

Accessories

Table 7. Accessories

Description	Part Number
Audio & Connectivity	
Data Cable Mini USB/USB/Serial	SKN6371
Headset Stereo FM - Universal (Cheerful Pink)	CHYN4391
Headset Stereo FM - Universal (Zest Blue)	CHYN4392
Headset - Neckloop	SYN7875
Headset Boom Mic Noise Cancel - Universal	SYN8908
Headset Mono Earbud - Universal (Black)	SYN8390
Headset Mono Earbud - Universal (Silver)	AAYN4264
Headset One Touch Customizable - Universal	SYN9351
Headset One Touch w/ Send-End	SYN8419
Headset Retractable Mic - Universal	SYN9050
Headset Stereo One Touch Earbud	CHYN4516
TransFlash Card with SD Adapter - 128 MB	SYN0943
TransFlash Card with SD Adapter - 16MB	SYN0940
TransFlash Card with SD Adapter - 256MB	SYN0944
TransFlash Card with SD Adapter - 32MB	SYN0941
TransFlash Card with SD Adapter - 64MB	SYN0942
USB 2.0 Card Reader	SYN1045
Bluetooth Products	
Bluetooth Mono Headset, Nickel- H500	SYN1290
Bluetooth Headset - HS830	SYN0996
Bluetooth Car Kit - HF850	SJ0014
Bluetooth Car Kit - Euro	S9643
Bluetooth Car Kit - IHF1000 - Americas/Asia	98676H
Bluetooth Car Kit - IHF1000 - EMEA	CFLN1232
Bluetooth Helmet Headset - HS830	SYN0997
Bluetooth Speaker - HF820	SYN0736C
Bluetooth Car Kit - Asia/Americas	S9642
Bluetooth Headset - Glossy Black - HS820	SYN9951
Bluetooth Headset - Green - HS820	SYN0945
Bluetooth Headset - Grey - HS820	SYN1106
Bluetooth Headset - HS805	SYN0986
Bluetooth Headset - HS815	SYN1201
Bluetooth Headset - HS801	CHYN4590
Bluetooth Headset - HS810	SYN9826
Bluetooth Headset - HS850 - Black	SYN1107
Bluetooth PC USB Adapter	SYN0717
Bluetooth Speaker - HF800	SYN0736
Consumer Personalization	
Carry Case	
Lanyard - Silver	CHYN4546
Lanyard - Silver*	AAYN4402
In-Vehicle Solutions	

Table 7. Accessories (Continued)

Description	Part Number
Self Install Car Kit - Smart Drive - Motorola	SYN1134
Self Install Car Kit - Smart Drive+ - Motorola	SYN1137
Smart Cable EMU - Motorola	SYN1003
Vehicle Power Adapter EMU - VC700	SYN0847
Power Solutions	
Charger Adapter - Aust/NZ Plug	SYN8127
Charger Adapter - Euro Plug	SYN7456
Charger Adapter - UK Plug	SYN7455
Travel Charger EMU Mid-Rate Switcher - Argentina	SPN5192
Travel Charger EMU Mid-Rate Switcher - Australia	SPN5193
Travel Charger EMU Mid-Rate Switcher - BRAZIL	SPN5187
Travel Charger EMU Mid-Rate Switcher - EURO	SPN5189
Travel Charger EMU Mid-Rate Switcher - INDIA	SPN5194
Travel Charger EMU Mid-Rate Switcher - MEXICO	SPN5186
Travel Charger EMU Mid-Rate Switcher - PRC	SPN5188
Travel Charger EMU Mid-Rate Switcher - TWN	SPN5216
Travel Charger EMU Mid-Rate Switcher - UK/HK	SPN5190
Travel Charger EMU Mid-Rate Switcher - US ENG	SPN5185
Travel Charger EMU Rapid Switcher - Argentina	SPN5197
Travel Charger EMU Rapid Switcher - BRAZIL	SPN5196
Travel Charger EMU Rapid Switcher - HK	SPN5199
Travel Charger EMU Rapid Switcher - PRC	SPN5198
Travel Charger EMU Rapid Switcher - US	SPN5202

A

alert setting indicator 16
alert settings 17
Antenna Cap, removing and replacing 23
antenna, removing and replacing 26

B

battery
 function 17
 gauge 17
 removing 20
battery housing
 removing 20
battery level indicator 16

C

caller ID 13
camera assembly, removing and replacing 34
Canadian Interference-Causing Equipment regulations 5
changes
 product 5
commands, manual test mode 39
conventions 7
copyrights
 computer software 6

D

disassembly 20
display assembly, removing and replacing 31

E

exploded view diagram 44
exploded view parts list 45

F

FCC rules 5
features
 caller ID 13
 SIM Toolkit 12
 text entry 13
 voice recognition 12
 Wireless Access Protocol (WAP) 12
features, product 11
flip assembly bezel, removing and replacing 30
flip assembly, removing and replacing 28
flip display module assembly, removing and replacing 36

I

identification 37
 international mobile station equipment identity 38
 mechanical serial number 37
 product 5
IMEI 38
in use indicator 15
indicators
 alert setting 16
 battery level 16
 in use 15
 menu 16
 message waiting 15
 roam 15
 signal strength 15
 voice message waiting 15
Introduction 5

M

manual test mode 39
menu
 structure diagram 16
menu indicator 16
message waiting indicator 15
motor/vibrator assembly, removing and replacing 35
MSN 37
my telephone number 16

N

names
 product 5
number
 viewing your number 16

O

operation
 controls, indicators, and I/O 14
operation, general 14
overview, product 11

P

part numbers
 accessories 47
parts 43
 exploded view diagram 44
 exploded view parts list 45
phone number
 viewing your number 16

product
 changes 5
 identification 5
 names 5
publications, related 43

R

rear housing
 removing 24
regulatory agency compliance 5
related publications 43
removing
 antenna 26
 Antenna Cap 23
 battery 17, 20
 battery housing 20
 camera assembly 34
 display assembly 31
 flip assembly 28
 flip assembly bezel 30
 flip display module assembly cover 36
 motor/vibrator assembly 35
 rear housing 24
 SIM 22
 transceiver board assembly 27
replacement parts
 contact information 8
replacing
 antenna 26
 Antenna Cap 23
 battery 20
 camera assembly 34
 display assembly 31
 flip assembly 28
 flip assembly bezel 30
 flip display module assembly 36
 motor/vibrator assembly 35
 rear housing 24
 SIM 22
 transceiver board assembly 27
roam indicator 15

S

serial number
 mechanical 37
service manual
 about 6
 revisions 7
 scope 6
service policy 7

customer support 7
 out of box failure 7
 product support 7
service procedure
 ordering replacement parts 8
shortcuts 16
shut down
 upon battery removal 17
signal strength indicator 15
SIM Application Toolkit 12
SIM card 37
 personality transfer 37
 replacing 22
SIM, removing and replacing 22
specifications 9
support
 customer 7
 product 7

T

telephone number
 viewing your number 16
text entry 13
tools and test equipment 19
transceiver board assembly, removing and replacing 27
troubleshooting 39
 manual test mode 39
 manual test mode commands 39

U

user interface diagrams 16

V

voice message waiting indicator 15
voice recognition 12

W

warranty service 7
wireless access protocol (WAP) 12

MOTOROLA, the Stylized M Logo, and all other trademarks indicated as such herein are trademarks of Motorola, Inc.

® Reg. U.S. Pat. & Tm. Off.

All other product or service names are the property of their respective owners.

© 2005 Motorola, Inc.

All rights reserved.

Personal Communications Sector,
Sawgrass International Concourse
789 International Parkway, Mailstop S2C
Sunrise, FL 33325-6222



6809493A69-O